

CriticalConneX™

2x4 CriticalTAP™ Regeneration

User Guide



CC2100-REGEN: Two(2) Gigabit Multi-mode Fiber or Copper Gigabit Inputs with Four(4) Copper Gigabit Monitoring Ports

Introduction

This user guide shows you how to install the CC2100-REGEN into your Multi-mode Fiber or Copper Gigabit network.


Inspect Package

Remove the TAP and accessories from the shipping box. Make sure you received these items:

- 1 x CC2100-REGEN: Two(2) Gigabit Multi-mode Fiber or Copper Gigabit inputs with four(4) Copper Gigabit Monitoring Ports
- 2 x Power Cords
- 1 x Console Cable: DB9M to DB9F, 10' Straight Through Cable

Note: If any items are missing or damaged in shipping please inform us immediately.

Front Panel

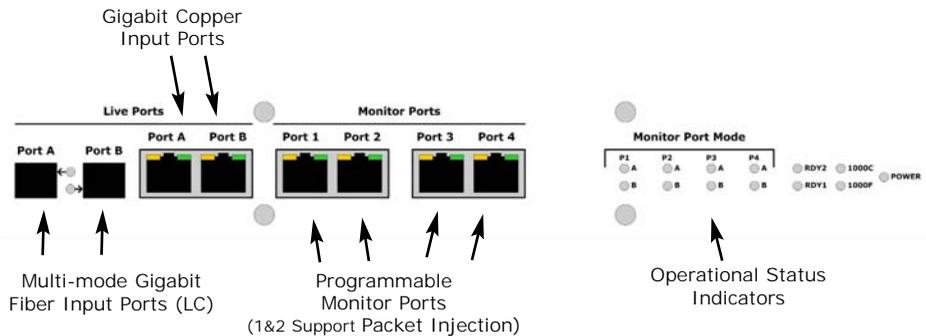

Rear Panel



Port Status Indicators



Getting Started

Before you start the installation you must perform the following steps:

1. Determine where the TAP will be installed into your network. This location must have access to an approved power outlet (100 to 240 VAC 50/60 Hz).
2. This product can be inserted into either a Gigabit Multi-mode Fiber Link or Copper Gigabit Link.
3. Obtain cables of the appropriate types and lengths
4. Multi-Mode Fiber Ports are LC Connectors
5. If your devices have ST or SC Connectors, then your multi-mode fiber patch cables need to be ordered with one connector LC and the other connector ST or LC.
6. Copper Gigabit Ports are RJ-45 Connectors.

Configuring the TAP

IMPORTANT! *The TAP must be configured before it is installed into the network.*

1. Plug the power cord into the power supply and into the power inlet on the rear of the unit. This product comes with dual power supplies. Only one power supply is required to support the unit.
2. Connect the console cable to the back of the unit and to your computer (COM1 or COM 2). (DB9 Male to DB9 Female cable)
3. The following configurations are available:
 - a. Live Ports: Choose Gigabit Multi-Mode Fiber or Copper Gigabit for your Network Ports
 - b. Each Copper Gigabit Monitoring Port can be configured to monitor traffic on Live Port A, Live Port B or Combi (Live Port A & B)
4. Launch HyperTerminal from your computer
 - a. In MS Windows click START, Run... then type hypertrm and click OK
 - b. This will bring up a HyperTerminal window
 - c. Type in a name for the Session and click OK
 - d. A new window will open. At the bottom of the window click on CONNECT USING and select the correct COM PORT and click OK
 - e. This will bring up a PORT SETTING window
 - f. Set the following values:
 - i. Bits per Second: 115200
 - ii. Data Bits: 8
 - iii. Parity: NONE
 - iv. Stop Bits: 1
 - v. Flow Control: NONE
 - g. Select OK
 - h. Hit ENTER
 - i. The login screen below will display:

CriticalConneX™ User Guide - CC2100-REGEN

```
=====  
Network Critical CriticalConneX 2x4 Regeneration TAP (Version 1.22)  
=====  
System will come up...
```

Hit any key to login.

Welcome to Network Critical CriticalConneX 2x4 Regeneration TAP

```
TINI login: admin  
TINI password: critcaltap
```

```
=====  
Welcome to Network Critical  
CriticalConneX 2x4 Regeneration Configuration  
=====  
1. Device Configuration  
2. System Configuration
```

0. Exit

Enter choice: 2

```
=====  
System Configuration  
=====  
1. User MgMt
```

0. Return

Enter choice: 1

```
Enter the new password:  
Confirm the new password:
```

```
=====  
System Configuration  
=====  
2. User MgMt
```

0. Return

Enter choice:

CriticalConneX™ User Guide - CC2100-REGEN

```
=====
---- Device Configuration ----
=====
---- Current Configuration ---
-----
Port                Media           Speed   Duplex   PortToMonitor
-----
LAN Port A&B       :   Fiber           1000    Full
Monitor Port 1    :   Copper           1000    Auto    A&B
Monitor Port 2    :   Copper           1000    Auto    A&B
Monitor Port 3    :   Copper           1000    Auto    A&B
Monitor Port 4    :   Copper           1000    Auto    A&B

Forward A-to-B    : Enabled
Forward B-to-A    : Enabled
-----
```

1. Setup - LAN Port A&B
2. Setup - Monitor Port 1
3. Setup - Monitor Port 2
4. Setup - Monitor Port 3
5. Setup - Monitor Port 4

0. Return

Select Port: ____

Select Port: 1

```
=====
--- Port Settings---
=====
Current Port       : A&B
```

1. Media
2. Duplex
3. Port Forward A-to-B
4. Port Forward B-to-A

0. Return

Enter choice: ____

```
=====
-- Media Setting--
=====
Current Port       : A&B
Current Media      : Copper
```

1. Fiber
2. Copper

0. Return

Enter choice: ____

Forward A-to-B

- 1. Enable
- 2. Disable

0. Return

Enter choice: ____

```
=====
-- Port to Monitor Setting--
=====
Monitor Port      : 1
PortToMonitor    : A
```


- 1. Monitor LAN A
- 2. Monitor LAN B
- 3. Monitor LAN A & LAN B

0. Return


Enter choice:

Complete configuring the Live Network Ports and Monitoring Ports for your requirements.


2X4 Configuration Multi-mode Fiber Gigabit or Copper Gigabit

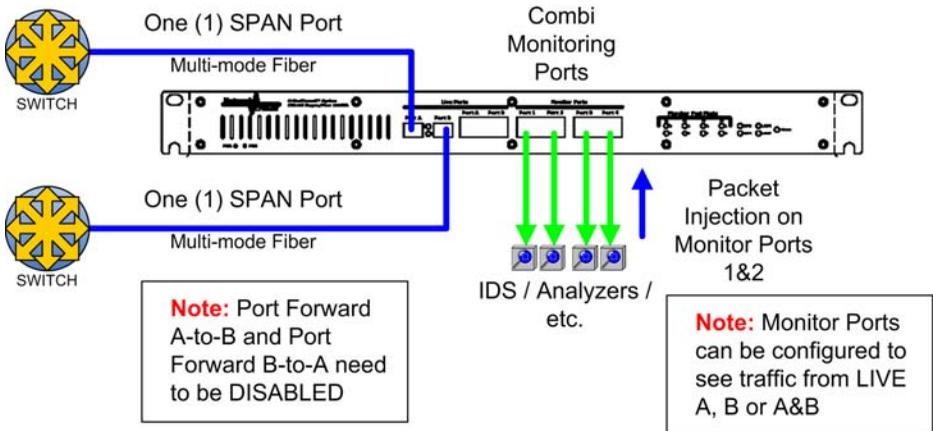

1X8 Configuration Multi-mode Fiber Gigabit or Copper Gigabit

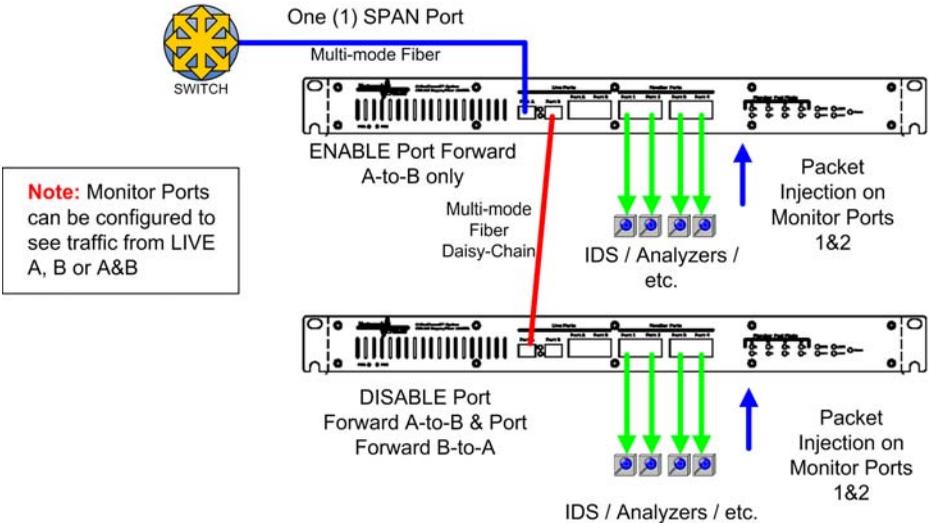

2X8 Configuration Multi-mode Fiber Gigabit or Copper Gigabit

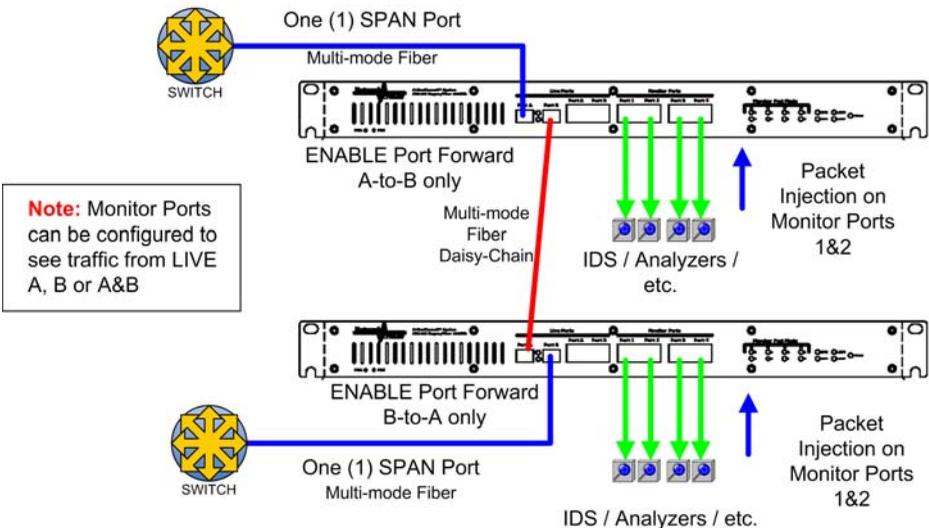

Installing the TAP

1. Plug the two power cords into the power supply and into the power inlet on the rear of the unit.
2. Configure the TAP (see above)
3. Connect the proper cables for your configuration to the Live Network Ports A & B.
 - a. Multi-Mode Fiber Patch Cables or Category 5 or 6 cables
 - b. The TAP must be set to Fiber or Copper during the configuration.
4. Check the Link/Activity indicators on your network device ports to verify whether data is flowing through the LIVE PORTS on the TAP.

Note: *If the network devices do not show Link/Activity, then verify the all devices are Gigabit and cables are connected properly.*

5. The TAP speed indicator on the front of the unit will light, Link/Activity Indicators on the LIVE PORTS will show activity, and the Monitor Port Light will show selected Monitor Ports.
7. Set-up sensor(s) and connect Ethernet cables from your sensor's monitoring port to MONITOR PORT 1, 2, 3 or 4.
8. Check the Link/Activity indicators on your sensors' network ports to see whether data is flowing from the TAP to the sensor ports.

Note: *If the TAP fails to power up or fails to show link/activity on all connected ports make sure that the power source is turned on and all connections & cables are known good.*

Further Information & Support

For more information and technical support on this product please contact us at the following locations:

Web	http://www.criticaltap.com/
UK Phone	+44 (0) 1189 543210
USA Phone	+1 716-833-2422
Email	support@networkcritical.com